
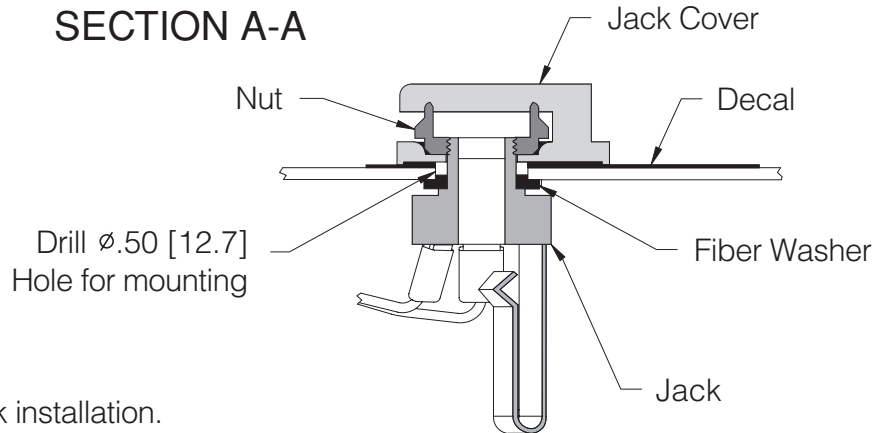


Cable Assy: Panel Mount Jack to Metri-Pack Connector.

P/N: 103-0752-00

Units: Inches [millimeters]
Scale: None

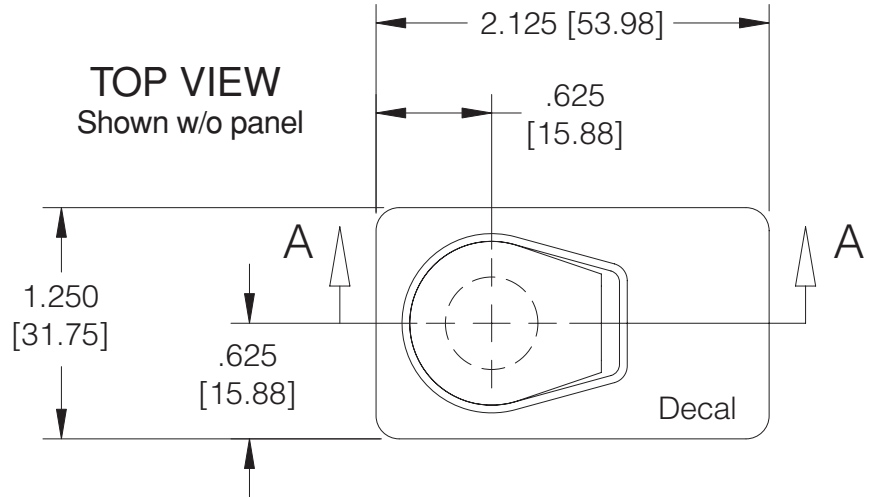


Installation Notes

1. Drill $\varnothing.50$ [12.7] hole for jack installation.
2. The jack and cover must be electrically isolated from the panel.
Install the fiber washer and decal as shown.

Metri-Pack 280

WIRING DIAGRAM

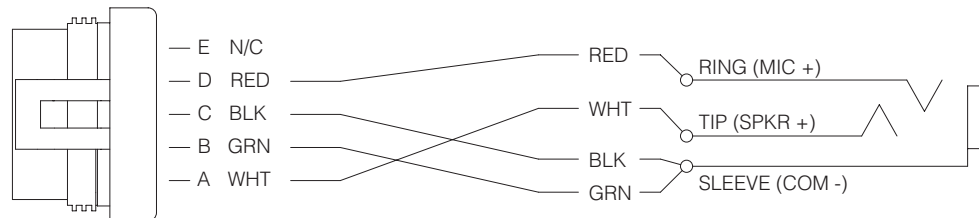

Flightcom Corporation

7340 SW Durham Road, Portland, OR 97224 USA
www.flightcom.net • e-mail: sales@flightcom.net
800-432-4342 or 503-684-8229

Flightcom is a registered trademark of Flightcom Corporation.
Specifications subject to change without notice. ©2007 Flightcom Corporation.